MOTOROLA

Motorola CD1

Digital Cordless Telephone with Answering Machine

For CD111, CD112, CD113 and CD114

Warning

Charge the handset for 24 hours before use.

Welcome...

to your new Motorola CD1 Digital Cordless Phone!

- All handsets are fully cordless with freedom to roam, within range of the base.
- 250 Name and number phonebook.
- Copy phonebook entries between handsets.
- Screensaver clock display.
- Answering machine with 30 minutes digital recording time.
- Caller Display shows you who's calling and see details of the last 30 callers in a Calls list.[1]
- Register up to 5 handsets to a single base and register each handset with up to 4 different bases.
- Make internal calls, transfer external calls, hold 3-way conversation between two internal callers and an external caller.
- Zoom font when dialling and editing for improved legibility.
- Loud ringer option for noisy environments.
- Earpiece amplification to boost the receive sound volume.
- Hearing Aid Compatible (HAC).

[1]You must subscribe to your network provider's Caller ID or Call Waiting service for these features to work. A subscription fee may be payable.

Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

Need help?

If you have any problems setting up or using your CD1, please contact Customer Services on **0800 0820750**.

Alternatively, you may find the answer in the 'Help' section at the back of this guide.

This User Guide provides you with all the necessary information you need to get the most from your phone.

Before you make your first call you will need to set up your phone. Follow the simple instructions in 'Getting Started', on the next few pages.

IMPORTANT

Only use the telephone line cord supplied.

This equipment is not designed to make emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

Got everything?

- CD1 handset
- CD1 base
- User guide
- Battery door
- 2 x AAA NiMH rechargeable batteries
- Power adaptor for the base
- Telephone line cord

If you have purchased an Maggiore multiple pack you will also have the following additional items:

- CD1 handset & charger
- 2 x AAA NiMH rechargeable batteries
- Power adaptor for the charger

1. Getting started 7

2. Getting to know your phone 11

3. Using the phone 16

3.1 To switch handset on/off 16
3.2 To make a call 16
3.3 To make a call by pre-dialling 16
3.4 To make a call using fast call keys 16
3.5 To make a handsfree call 16
3.6 Call from the phonebook 16
3.7 Call from the calls list 16
3.8 To answer a call 17
3.9 To answer a call in handsfree 17
3.10 To adjust the volume 17
3.11 Amplification 17
3.12 To mute the microphone 18
3.13 To end a call 18
3.14 To lock the keypad 18
3.15 To call another handset: intercom 18
3.16 To transfer an external call to another handset 18
3.17 To switch between an internal and external call 19
3.18 To make a three way conference call 19
3.19 Call waiting 19

4. Phonebook 20

4.1 To view and dial phonebook entries 20
4.2 To store an entry 20
4.3 Entering names 20
4.4 Character map 21
4.5 To enter a pause 22
4.6 To search an entry 22
4.7 To view details of an entry 22
4.8 To edit an entry 22
4.9 To copy an entry to another handset 22
4.10 To assign a ringtone 23
4.11 To delete an entry 23
4.12 To assign a fast call number 23
4.13 To clear a fast call number 23
4.14 To access the phonebook during a call 24
4.15 To copy the phonebook to another handset 24
4.16 To check memory status 24
4.17 To delete all entries 24

5. Calls list 25

5.1 New calls alert 25
5.2 To dial from the calls list 25
5.3 To view details of the call 26
5.4 To save a number from the calls list to the phonebook 26
5.5 To delete a calls list entry 26

5.6 To delete entire calls list....27
5.7 To redial the last number....27
5.8 To view and dial a number in the redial list....27
5.9 To copy a redial number to the phonebook....27
5.10 To delete a redial list entry....27

6. Agenda....28
6.1 To add a new event....28
6.2 To switch off reminder ring....28
6.3 To show agenda details....28
6.4 To edit an agenda....29
6.5 To delete an agenda....29
6.6 To delete all agendas....29

7. Clock & Alarm....30
7.1 To set date and time manually....30
7.2 To set alarm....30
7.3 To set time format....30

8. Handset settings....31
8.1 To set the handset ringtone....31
8.2 To set the handset ringer volume....31
8.3 To set the receiver volume....31
8.4 To change the handset name....32
8.5 To change the display language....32
8.6 To set the wallpaper....32
8.7 To change menu colour....32
8.8 To set the screensaver....32
8.9 To set light timeout....33
8.10 To change display contrast....33
8.11 To switch auto talk on / off....33
8.12 To switch key beep on / off....33
8.13 To set PBX access code....34

9. Base settings....34
9.1 To set the base ringtone....34
9.2 To set the base ringer volume....34
9.3 To change the dialling mode....35
9.4 To set ring priority....35
9.5 To change the recall mode....35
9.6 To switch first ring on / off....36
9.7 To change the System PIN....36
9.8 To reset the CD1....36
9.9 To switch ECO mode on / off....37

10. Registration....37
10.1 To register a handset....37
10.2 To select a base....38
10.3 To de-register a handset....38

11. Room Monitor....39
11.1 To switch Room Monitor On....39
11.2 To change the monitor level....39
11.3 To set the dial out number....39

12. The Answering machine 40
12.1 Base control keys 40
12.2 To switch the answering machine on / off..... 41
12.3 To change answer delay..... 41
12.4 To switch message alert tone on / off..... 42
12.5 New messages alert 42
12.6 Outgoing messages..... 42
12.7 To record a personalised outgoing message 42
12.8 To play or delete your personalised outgoing message 43
12.9 To set the answer mode and announcement..... 43
12.10 To record a memo 43
12.11 Call screening..... 44
12.12 Message playback..... 44
12.13 Delete all old messages..... 45
12.14 Remote access..... 45
12.15 To switch remote access On / Off..... 46
12.16 To change the remote access PIN 46

13. Help 47

14. General information.....49

1. Getting started

WARNING
Do not place the CD1 in the bathroom or other humid areas.

Location

You need to place the CD1 base within 2 metres of the mains power socket and telephone socket so that the cables will reach.

Make sure it is at least 1 metre away from other electrical appliances to avoid interference. The CD1 works by sending radio signals between the handset and base. The strength of the signal depends on where you site the base. Place it at a higher position to ensure the best signal.

HANDSET RANGE
The CD1 has a range of up to 300 metres outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and handset either indoors or outdoors, the range will normally be up to 50 metres. Thick stone walls can severely affect the range.

SIGNAL STRENGTH
The icon on your handset indicates when you are in range. When out of range of the base, the screen shows Searching ... *and the icon flashes.*

If you move out of range during a call, the telephone call will be disconnected. Move back within range before you make any more calls. The handset will automatically re-connect to the base once you are back within range.

IMPORTANT
The base station must be plugged into the mains power at all times. Do not plug the telephone line cord into the wall socket until the handset is fully charged. Only use the power and telephone cables supplied with the product.

WHICH POWER ADAPTOR?
The power adaptor with the clear connector is for the base unit and the power adaptor with the red colour connector is for the charger unit (multipacks only).

Connecting the base

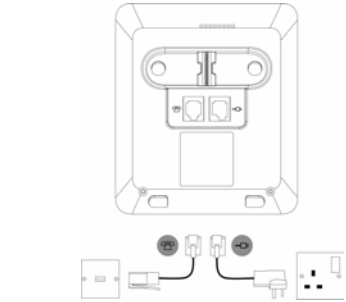

1. Plug the telephone line cord into the socket marked on the underside of the base.
2. Plug the mains power cable with the clear connector into the socket marked on the underside of the base and plug the other end into the mains power wall socket. Switch on the power.

Installing and charging the handset

1. Remove the battery cover from the back of the handset and insert the 2 x AAA NiMH rechargeble batteries supplied. Please note the '+' and '-' markings inside the battery compartment and insert the batteries in the correct direction.
2. Slide the battery cover back into place.
3. If you are charging the batteries for the first time, place the handset on the base to charge for at least 24 hours continuously.
4. When the handset is fully charged, will appear steadily on the display. Plug the other end of the telephone line cord (make sure that one end is already plugged into the base) into the telephone wall socket.

Connecting the handset and charger (for multipacks)

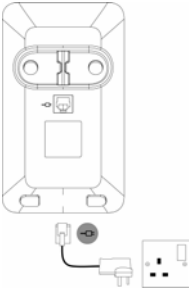

If you have purchased a multiple pack, follow the steps below for all handsets and chargers.

1. Plug the mains power cable with the red connector into the socket marked on the underside of the charger and plug the other end into the mains power wall socket.
2. Remove the battery cover from the back of the handset and insert the 2 x AAA NiMH rechargeble batteries supplied. Please note the '+' and '-' markings inside the sbattery compartment and insert the batteries in the correct direction.
3. Slide the battery cover back into place.
4. If you are charging the batteries for the first time, place the handset on the charger to charge for at least 24 hours continuously.
5. When the handset is fully charged, icon will appear steadily on the display.
   The display will show the time and handset number (e.g. 2) to indicate that it is registered to the base.

BATTERY LOW WARNING

When the battery is low, you will hear a warning beep in the earpiece and the icon appears in the display. You will need to recharge the handset before you can use it again.

When charging, icon in the display will scroll.

BATTERY PERFORMANCE

In ideal conditions, fully charged batteries should give up to 8 hours of talk time or up to 100 hours of standby time on a single charge.

Note that new batteries do not reach their full capacity until they have been put to normal use for several days.

To keep your batteries in the best condition, leave the handset off the base for a few hours at a time.

Running the batteries right down at least once a week will help them last as long as possible.

The charge capacity of rechargeable batteries will reduce with time as they wear out, giving the handset less talk/ standby time. Eventually they will need to be replaced.

Batteries and handset may become warm during charging. This is normal.

WARNING
Use only rechargeable batteries. If non-rechargeable batteries are used, Wrong Battery *appears and charging will stop. Replace with 2 AAA 750 mAh NiMH rechargeable batteries.*

Date and time

If you have subscribed to your network's Caller Display service, the date and time is set automatically for all handsets when you receive your first call.

If you are not subscribed to Caller Display service, you can set the date and time manually.

To set date and time manually

1. Press Menu, scroll ▼ to Clock & Alarm and press Select.
2. Date & Time is highlighted. Press Select.
3. Enter the date using the format DD/MM/YY e.g. 04/08/10 for 4th of August 2010.
4. Enter the time (HH:MM) and press Save.
   If the current time format setting is 12 hour, select am or pm.
   To change Time Format, see page 30.
5. Press ⏻ to return to standby mode.

Your CD1 is now ready for use.

2. Getting to know your phone

Overview of your handset

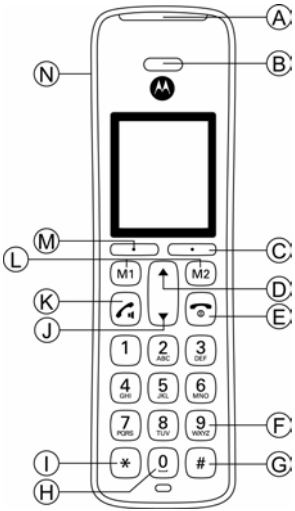

A Ringer Indicator LED
Illuminates red when the phone is in use. Flashes when there is an incoming call.

B Earpiece

C Phonebook menu / Clear / Back / Right softkey
In standby mode, press to open the phonebook menu.
Clear incorrect input during text editing.
Return to previous menu.
Press to select options displayed on screen.

D Redial list / Scroll up / Volume up
In standby mode, press to open the redial list.
Press and hold to enter a pause (P) during pre-dialling.

E End Call / Exit / Switch Handset on/off
Press and hold for 3 seconds to switch off the handset.

F Recall / 9
For use with switchboard/PABX.

G HASH / Keypad lock / Change case
Press and hold to switch keypad lock on or off.
Press to change the case when entering letters/editing.

H Intercom / 0
Press and hold to make a internal call.

I Tone or Pulse Dialling / *
Press and hold to switch between Tone and Pulse dialling during a call.

J Phonebook / Scroll down / Volume down
In standby mode, press to open the phonebook list.

K Talk / Handsfree
Press to switch handsfree on or off during a call.

L **Direct Memory keys**
Press to call pre-stored number directly.

M **Menu / Left softkey**
In standby mode, press to open the Menu.

N **Amplification (Handset receiver)**
Press to increase the receiving volume through the earpiece when on a call.

Handset LCD Display

Display icons

Steady when the handset is registered and within range of the base. Flashes when the handset is out of range or searching for the base.

Displays when ECO mode is on.

Handset ringer volume is Off.

Displays when in handsfree mode.

The alarm clock has been set.

The keypad is locked.

Displays when the answering machine is on.

Displays when you have missed calls and new number(s) in the Calls list.

Displays when you have new answering machine messages.

Displays when you have new voicemails.

The approximate power levels of your battery are indicated as follows:

Battery is fully charged

Battery is partially charged

Battery is running low
Flashes when battery is almost fully discharged

Overview of the base

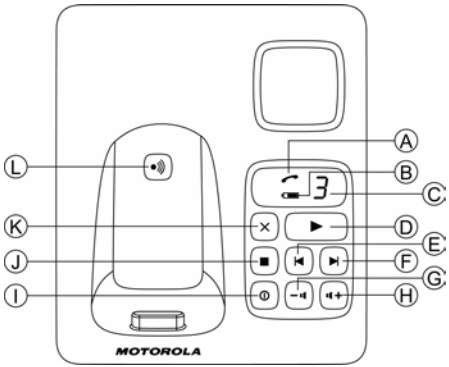

A	**Power/In Use LED**	**G**	**Volume down**
B	**Charger LED**	**H**	**Volume up**
C	**Message counter**	**I**	**Answering machine on/off**
D	**Play**		
E	**Skip Backwards/ Replay**	**J**	**Stop**
		K	**Delete**
F	**Skip Forward**	**L**	**Page**

Paging/Find handset

This function allows you to page for the handset user or locate a missing handset.

Paging calls cannot be answered by a handset.

1. Press (•)) on the base. All handsets registered to the base will ring and display Paging Call.
2. To stop the ringing, press (•)) on the base again or press Stop or any button on the handset.

Navigating the menu

The basic steps of navigating through the menu and on-screen options.

1. In standby mode, press the left soft key Menu. The main menu is opened.
2. Use the ▲ or ▼ keys to scroll through the menu.
3. Soft key options Select and Back are displayed.
   Press the left softkey Select to open a submenu or validate an option.
   Press the right softkey Back to go back to the previous menu level, correct a character or cancel an action.
4. Press ⌂ to return to standby mode.

NOTE

If you do not press any button on the handset for 30 seconds the display will automatically return to standby mode. It will also return to standby mode when the handset is placed on the base or charger.

Menu map

Names	Answer Machine	Calls Lists	Agenda	Clock & Alarm	Settings	Registration	Extra
Search	Play	Missed Calls	*If there is an event, the following options will be displayed:*	Date & Time	Set Handset	Register Handset	Room Monitor
Add Entry	Play All	Received Calls	Add Event	Alarm	¬ *Ringtone*	Select Base	
Copy Phonebook	Answer On/Off	Dialled Calls	Show Details	Time Format	¬ *Ringer Volume*	De-register	
Memory Status	Record Memo	Delete Calls	Edit Event		¬ *Receiver Volume*		
Delete Phonebook	Outgoing Message		Delete Event		¬ *Handset Name*		
While viewing an entry, select Options*:*	Delete Messages		Del. All Events		¬ *Language*		
Show Details	Answer Settings		*If the list is empty:*		¬ *Wallpaper*		
Edit Entry	¬ *Answer Mode*		Add Entry		¬ *Menu Colour*		
Copy Entry	¬ *Answer Delay*				¬ *Screensaver*		
Ringtone	¬ *Message Alert*				¬ *Light Timeout*		
Delete Entry	¬ *Remote Access*				¬ *Display Contrast*		
Fast Call					¬ *Auto Talk*		
During a call, press Names *to select an entry, then select* Options*:*					¬ *Key Beep*		
Add Entry					¬ *PBX Access Code*		
Show Details					Set Base		
Edit Entry					¬ *Ringtone*		
Delete Entry					¬ *Ringer Volume*		
					¬ *Dialling Mode*		
					¬ *Ring Priority*		
					¬ *Recall Mode*		
					¬ *First Ring*		
					¬ *System PIN*		
					¬ *Master Reset*		
					¬ *ECO Mode*		

3. Using the phone

3.1 To switch handset on/off

1. Press and hold ⏻ until the handset switches off.
2. Press ⏻ to switch the handset back on.

3.2 To make a call

1. Press ✆.
2. Dial the telephone number.

3.3 To make a call by pre-dialling

1. Enter the phone number (maximum 32 digits). If you make a mistake, press Clear.
2. Press ✆ to dial the phone number entered.

NOTE
If the dialled number matches an entry in the phonebook, the name is displayed.

3.4 To make a call using fast call keys

1. Press M1 or M2 to dial the pre-stored number directly. If no number is stored, you will hear a beep.

NOTE
To assign a fast call number, see page 23.

3.5 To make a handsfree call

1. Press ✆ twice.
2. Dial the telephone number.

TIP
During a handsfree call, press ▲ or ▼ to adjust the volume.

3.6 Call from the phonebook

1. Press ▼. The first entry in the phonebook is highlighted.
2. Scroll ▲ or ▼ to the entry you want.
   Or
   To search alphabetically, press the key with the first letter of the name, e.g. if the name begins with N, press 6 MNO twice. The display shows the first entry beginning with N. If required, scroll ▲ or ▼ to the exact entry.
3. Press ✆ to dial the number.

3.7 Call from the calls list

NOTE
You need to subscribe to your network's Call Display service to be able to see the caller's number in the calls list.

1. Press Menu, scroll ▼ to Calls Lists and press Select.

2. Scroll ▲ or ▼ to highlight the calls list (**Missed Calls**, **Received Calls**, **Dialled Calls**, **Delete Calls**) you want.
3. Press **Select** to confirm.
4. Scroll ▲ or ▼ to the entry you want.
5. Press to dial the number.

3.8 To answer a call

1. When the phone rings, press .

TIP

If Auto Talk mode is on, simply lift up the handset from its base to answer the call. The default setting is On. If you have changed Auto Talk mode to Off, you will need to press to answer a call.

NOTES

If Auto Talk mode is on and the handset is on the base, you will not be able to see the Caller's details before you answer the call.

An incoming call has priority over other events. Whenever there is an incoming call, other operations in progress such as phone settings, menu navigation, etc. will be ended.

3.9 To answer a call in handsfree

1. When the phone rings , press twice to answer the call in handsfree mode.

WARNING

When the phone is ringing, avoid holding the earpiece too close to your ear as it may damage your hearing. Handsfree activation can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.

TIP

To switch back to earpiece mode, press again during the call.

3.10 To adjust the volume

1. During a call, press ▲ or ▼ to adjust the earpiece or loudspeaker volume.
   The level is shown in the handset display.

3.11 Amplification

The CD1 comes with a dedicated Amplification button which allows you to boost the earpiece volume.

To switch the amplification feature On:

1. Press in Talking mode. The icon will be shown on the display. Each earpiece receiving volume step will be boosted in volume.
   When amplification is set to On you can press ▲ or ▼ to adjust the setting (1-8 steps)

To switch the amplification feature Off:

1. After the AMP feature is switched ON in talking mode, then, press again, the will switch OFF and the earpiece receiving volume step will return to normal.

3.12 To mute the microphone

Mute the microphone so that you can talk to someone else in the room without your caller hearing you.

1. During a call, press Secrecy. The display shows Secrecy on and your caller cannot hear you.
2. Press Off to return to your caller.

3.13 To end a call

1. Press or replace the handset on the cradle.

NOTE

After you hang up, the duration of your call is displayed for 5 seconds.

3.14 To lock the keypad

You can lock the keypad to prevent accidental dialling while carrying it around.

1. Press and hold #. The icon is displayed.
2. To unlock the keypad, press Unlock. The display shows Press # to Unlock Keys.
3. Press #.

NOTE

While the keypad is locked, you can answer incoming calls as normal.

3.15 To call another handset: intercom

This feature is only available when there are at least 2 registered handsets. It allows you to make internal calls, transfer external calls from one handset to another and use the conference option.

1. Press and hold 0.
2. Enter the number of the handset you want to call and press OK.
3. Press to hang up.

NOTE

If the handset does not belong to the CD1 product line, this function may not be available.

3.16 To transfer an external call to another handset

1. During an external call, press and hold 0. Your caller is put on hold.
2. Enter the number of the handset you want to call and press OK.

3. When the other handset answers, announce the caller then press **End** to transfer the call. If the other handset does not answer, press and hold 0 to talk to your caller again.

3.17 To switch between an internal and external call

1. During an external call, press and hold 0. Your caller is put on hold.
2. Enter the number of the handset you want to call and press **OK**.
3. When the other handset answers you can speak privately to your internal caller.
4. Press and hold 0 to switch between both callers.
5. Press to hang up.

3.18 To make a three way conference call

You can hold a 3-way conference call between 2 internal callers and 1 external caller.

1. During an external call, press and hold 0. Your caller is put on hold.
2. Enter the number of the handset you want to call and press **OK**.
3. When the other handset answers, announce the call then press **Join** to connect both calls. If the other handset does not answer, press and hold 0 to talk to your caller again.
4. Press to hang up.

3.19 Call waiting

You must subscribe to your network's Caller Waiting service for Call Waiting to work. A quarterly fee may be applicable.

1. During a call, you will hear a soft beep in the earpiece if you receive a second external call. The display shows the number of the caller or alternates the name and the number if it matches an entry in your phonebook. If these are not available, the display shows **Call Waiting**.
2. Press and hold 9 wxyz to put your current caller on hold and speak to the new caller.
3. Press and hold 9 wxyz again to switch between both callers.
4. Press to finish the current call. To end both calls, press twice or replace the handset on the cradle.

4. Phonebook

The CD1 handset phonebook can store up to 250 names and numbers.

NOTE

Numbers can be up to 24 digits long and names up to 12 characters long. Entries are stored in alphabetical order.

4.1 To view and dial phonebook entries

1. In standby mode, press ▼. The first entry is highlighted on the display.
2. Scroll ▲ or ▼ to the entry you want.
   Or
   To search alphabetically, press the key with the first letter of the name, e.g. if the name begins with N, press 6 mno twice. The display shows the first entry beginning with N. If required, scroll ▲ or ▼ to the exact entry.
3. Press to dial the entry displayed.

4.2 To store an entry

1. Press **Names** to enter the phonebook menu.
2. Scroll ▼ to **Add Entry** and press **Select**.
3. Enter a name and press **OK**.
4. Enter a number and press **Save**.
5. Scroll ▲ or ▼ to the ringtone you want and press **Select**. The entry is stored.
6. Press to return to standby mode.

NOTE

Cancel storing an entry by pressing at any time during the process.

4.3 Entering names

Use the alphanumeric keypad to enter names in the phonebook.

For instance to enter the name Paul

P Press 7 pqrs once

A Press 2 abc once

U Press 8 tuv twice

L Press 5 jkl three times

To enter a space, press 0 .

Press ▲ or ▼ to move between characters/digits.

Press **Clear** to delete a character, or press and hold **Clear** to delete all characters.

4.4 Character map

Key	Case	Assigned characters and symbols
1	L/U*	. , - ? ! ¡ ¿ ' @ : ; / 1
2 ABC	L	a b c 2 ä æ å à ç
	U	A B C 2 Ä Æ Å Ç
3 DEF	L	d e f 3 è é
	U	D E F 3 É
4 GHI	L	g h i 4 ì
	U	G H I 4
5 JKL	L	j k l 5
	U	J K L 5
6 MNO	L	m n o 6 ö ø ò ñ
	U	M N O 6 Ö Ø Ñ
7 PQRS	L	p q r s 7 ß
	U	P Q R S 7
8 TUV	L	t u v 8 ù ü
	U	T U V 8 Ü
9 WXYZ	L	w x y z 9
	U	W X Y Z 9
0	L/U	Space 0
*	L/U	*
#	L/U	short press to switch between Abc, abc, ABC and 123 mode

*L = Lower
U = Upper

4.5 To enter a pause

If the CD1 is connected to a switchboard, you may need to enter a pause in a stored number. This gives the switchboard time to find an outside line. A pause is normally stored after the switchboard access code (e.g. 9)

When storing a number, press and hold ▲ until the display shows P. You can then continue storing the phone number.

4.6 To search an entry

1. Press Names to enter the phonebook menu.
2. Search is highlighted. Press Select. The first entry is highlighted on the display.
3. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry.
4. Press to dial the entry or to return to standby mode.

4.7 To view details of an entry

1. In standby mode, press ▼. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press Options.
3. Show Details is highlighted. Press Select. The name, number and ringtone of the entry are displayed.
4. Press to dial the entry or to return to standby mode.

4.8 To edit an entry

1. In standby mode, press ▼. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press Options.
3. Scroll ▼ to Edit Entry and press Select.
4. Edit the name and press OK to confirm. Press Clear to delete a character, or press and hold Clear to delete all characters.
5. Edit the number and press Save. Press Clear to delete a character, or press and hold Clear to delete all characters.
6. Press to return to standby mode.

4.9 To copy an entry to another handset

1. In standby mode, press ▼. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press Options.
3. Scroll ▼ to Copy Entry and press Select.
4. Scroll ▲ or ▼ to the number of the handset you want the entry to be copied to. Press Select.

5. When the message "Copy Phonebook?" appears on the destination handset, press Yes on the handset to start the copy process.
6. Copy is completed when the message "<Name> copied" appears on the display. Press ⏻ to return to standby mode.

NOTE
If an entry with the same number is already stored in the receiving handset, it will not be copied.

4.10 To assign a ringtone

1. In standby mode, press ▼. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press Options.
3. Scroll ▼ to Ringtone and press Select.
4. Scroll ▲ or ▼ to the ringtone you want and press Select. The ringtone is saved.
5. Press ⏻ to return to standby mode.

4.11 To delete an entry

1. In standby mode, press ▼. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press Options.
3. Scroll ▼ to Delete Entry and press Select.
4. Display shows Delete <Name>?. Press Yes to confirm.
5. Press ⏻ to return to standby mode.

4.12 To assign a fast call number

1. In standby mode, press ▼. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press Options.
3. Scroll ▼ to Fast Call and press Select.
4. Scroll ▲ or ▼ to Key 1 (M1) or Key 2 (M2) then press Select.
5. Display shows Assign. Press Select to confirm. The fast call number is assigned to the key.
6. Press ⏻ to return to standby mode.

4.13 To clear a fast call number

1. In standby mode, press ▼. The first entry is highlighted on the display.

2. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press Options.
3. Scroll ▼ to Fast Call and press Select.
4. Scroll ▲ or ▼ to Key 1 (M1) or Key 2 (M2) then press Select.
5. Scroll ▼ to Clear Entry and press Select. The fast call number is cleared.
6. Press ☎ to return to standby mode.

4.14 To access the phonebook during a call

1. During a call, press Names.
2. Press Options to select Add Entry, Show Details, Edit Entry or Delete Entry.

4.15 To copy the phonebook to another handset

1. Press Names to enter the phonebook menu.
2. Scroll ▼ to Copy Phonebook and press Select.
3. Scroll ▲ or ▼ to the number of the handset you want the phonebook to be copied to. Press Select.
4. When the message "Copy Phonebook?" appears on the destination handset, press Yes on the handset to start the copy process.
5. Copy is completed when the message "X entries copied" appears on the display. Press ☎ to return to standby mode.

NOTE
If an entry with the same number is already stored in the receiving handset, it will not be copied.

4.16 To check memory status

You can check how much phonebook memory you have on your phone.

1. Press Names to enter the phonebook menu.
2. Scroll ▼ to Memory Status and press Select. The display shows the number of used and free phonebook entries.
3. Press ☎ to return to standby mode.

4.17 To delete all entries

1. Press Names to enter the phonebook menu.
2. Scroll ▼ to Delete Phonebook and press Select.
3. Display shows Delete all entries?. Press Yes.
4. Press ☎ to return to standby mode.

5. Calls list

If you have subscribed to Call Display service, and provided the identity of the caller is not withheld, the number of the caller will be displayed together with the date and time of the call (if provided by the network).

NOTES

If the caller's number is stored in your phonebook along with a name, the name will also be displayed.

If the number is unavailable, Unavailable *will be displayed.*

If the caller has withheld their number, Private/Withheld *will be displayed.*

If the call is from an international number, International *will be displayed.*

If the call is from the operator, Operator *will be displayed.*

If the call is from a payphone, Payphone *will be displayed.*

If the call is from a ringback request, Ringback *will be displayed.*

Information about incoming calls is dependent on the country and network operator. Some operators may charge a subscription for their Call Display service.

The calls list contains details of missed and received call. Details include the date and time of the call. Entries are displayed in chronological order with the most recent call at the top of the list.

When the list is full, and a new call is received, the oldest entry will be deleted automatically.

The received and missed calls list holds details of up to 30 calls.

If you receive more than one call from the same number, only the most recent call is kept in the calls list.

5.1 New calls alert

When you have new missed calls (incoming calls that you haven't answered), the display shows You have X new calls.

If you press Back, the screen returns to standby mode and the icon is displayed.

1. Press View to see details of the call.

5.2 To dial from the calls list

1. Press Menu, scroll ▼ to Calls Lists and press Select.
2. Scroll ▲ or ▼ to highlight the calls list (Missed Calls, Received Calls, Dialled Calls, Delete Calls) you want.
3. Press Select to confirm. The most recent number or name if stored in the phonebook is displayed.
4. Scroll ▲ or ▼ to the entry you want.
5. Press ⟨ ⟩ to dial the number.

5.3 To view details of the call

1. Press Menu, scroll ▼ to Calls Lists and press Select.
2. Scroll ▲ or ▼ to highlight the calls list (Missed Calls, Received Calls, Dialled Calls, Delete Calls) you want.
3. Press Select to confirm. The most recent number or name if stored in the phonebook is displayed.
4. Scroll ▲ or ▼ to the entry you want and press Options.
5. Display shows Show Details. Press Select.
   The number (or name if stored in the phonebook), date and time of the call are displayed.
6. Press Back to return to the previous menu level or ☎ to return to standby mode.

5.4 To save a number from the calls list to the phonebook

1. Press Menu, scroll ▼ to Calls Lists and press Select.
2. Scroll ▲ or ▼ to highlight the calls list (Missed Calls, Received Calls, Dialled Calls, Delete Calls) you want.
3. Press Select to confirm. The most recent number or name if stored in the phonebook is displayed.
4. Scroll ▲ or ▼ to the entry you want and press Options.
5. Scroll ▼ to Save Number and press Select.
6. Enter a name and press OK.
7. Display shows the number of the call. Edit the number if necessary and press Save.
   Press Clear to delete a character, or press and hold Clear to delete all characters.
8. Scroll ▲ or ▼ to the ringtone you want and press Select. The entry is stored.
9. Press ☎ to return to standby mode.

5.5 To delete a calls list entry

1. Press Menu, scroll ▼ to Calls Lists and press Select.
2. Scroll ▲ or ▼ to highlight the calls list (Missed Calls, Received Calls, Dialled Calls, Delete Calls) you want.
3. Press Select to confirm. The most recent number or name if stored in the phonebook is displayed.
4. Scroll ▲ or ▼ to the entry you want and press Options.
5. Scroll ▼ to Delete Call and press Select. The call is deleted.
6. Press ☎ to return to standby mode.

5.6 To delete entire calls list

1. Press Menu, scroll ▼ to Calls Lists and press Select.
2. Scroll ▼ to Delete Calls and press Select.
3. Scroll ▲ or ▼ to highlight the calls list (Missed Calls, Received Calls, Dialled Calls or All Calls) you want.
4. Display shows Delete all calls?. Press Yes to confirm.
5. Press ☎ to return to standby mode.

5.7 To redial the last number

The CD1 lets you redial any of the last 20 numbers called. Numbers can be up to 32 digits long.

1. Press ▲. The last number dialled is highlighted.

   If the number is stored in the Phonebook, the name is displayed as well.
2. Press ✆ to dial.

5.8 To view and dial a number in the redial list

1. Press ▲. The last number dialled is highlighted.
2. Scroll ▲ or ▼ to the entry you want.
3. Press ✆ to dial the number.

5.9 To copy a redial number to the phonebook

1. Press ▲. The last number dialled is highlighted.
2. Scroll ▲ or ▼ to the entry you want and press Options.
3. Scroll ▼ to Save Number and press Select.
4. Enter a name and press OK.
5. Display shows the number of the call. Edit the number if necessary and press Save.
6. Scroll ▲ or ▼ to the ringtone you want and press Select. The entry is stored.
7. Press ☎ to return to standby mode.

5.10 To delete a redial list entry

1. Press ▲. The last number dialled is highlighted.
2. Scroll ▲ or ▼ to the entry you want and press Options.
3. Scroll ▼ to Delete Call and press Select. The call is deleted.
4. Press ☎ to return to standby mode.

6. Agenda

6.1 To add a new event

Use the CD1 to remind you of details of up to five events such as birthdays, anniversaries or appointments.

Up to 24 characters can be entered as the subject.

1. Press Menu, scroll ▼ to Agenda and press Select.
2. If no previous event is stored, Add Entry is highlighted. Press Select.
   Or
   If events are already stored, they are listed. Press Options. Add Event is highlighted. Press Select.
3. Enter the subject and press Save.
4. Enter the date (DD/MM) and time (HH:MM) and press Save. If the current time format setting is 12 hour, select am or pm.
5. Scroll ▲ or ▼ to Silent or Alarm then press Select.
   If you press Alarm:
   Scroll ▲ or ▼ to Once or Annually then press Select.
   - If Once is selected, scroll ▲ or ▼ to select when you want to receive the reminder At event time or 30 min before. Press Select to save.
   - If Annually is selected, then the alarm will sound at the event's time.
6. Press ⏻ to return to standby mode.

NOTES

If you select a silent reminder, the event subject is displayed on screen but no alarm will sound.

When the event memory is full, the display shows Memory Full. You must delete an event before you can add a new one.

6.2 To switch off reminder ring

When the event is due, the event subject is displayed. If the reminder is not set to Silent, the alarm will ring and the icon is displayed.

1. Press View to stop the alarm and see the details of the event.
   Or
   Press Back to stop the alarm and return to standby mode.

NOTE

If no button is pressed, the alarm stops after one minute.

6.3 To show agenda details

1. Press Menu, scroll ▼ to Agenda and press Select.
2. Stored events are displayed. The first event is highlighted on the display. If required, scroll ▼ to the event you want and press Options.

3. Scroll ▼ to Show Details and press Select. The description, date and time of the agenda are displayed.
4. Press Back to return to the previous menu level or ☎ to return to standby mode.

6.4 To edit an agenda

1. Press Menu, scroll ▼ to Agenda and press Select.
2. Stored events are displayed. The first event is highlighted on the display. If required, scroll ▼ to the event you want and press Options.
3. Scroll ▼ to Edit Event and press Select.
4. Edit the subject and press Save.
   Press Clear to delete a character, or press and hold Clear to delete all characters.
5. Edit the date (DD/MM) and time (HH:MM) and press Save.
   If the current time format setting is 12 hour, select am or pm.
6. Scroll ▲ or ▼ to Silent or Alarm then press Select.
   If you press Alarm:
   Scroll ▲ or ▼ to Once or Annually then press Select.
   - If Once is selected, scroll ▲ or ▼ to select when you want to receive the reminder At event time or 30 min before. Press Select to save.
   - If Annually is selected, then the alarm will sound at the event's time.
7. Press ☎ to return to standby mode.

6.5 To delete an agenda

1. Press Menu, scroll ▼ to Agenda and press Select.
2. Stored events are displayed. The first event is highlighted on the display. If required, scroll ▼ to the event you want and press Options.
3. Scroll ▼ to Delete Event and press Select.
4. Display shows Delete event?. Press Yes to confirm or No to cancel.
5. Press ☎ to return to standby mode.

6.6 To delete all agendas

1. Press Menu, scroll ▼ to Agenda and press Select.
2. Stored events are displayed. The first event is highlighted on the display. Press Options.
3. Scroll ▼ to Del. All Events and press Select.
4. Display shows Delete all events?. Press Yes to confirm or No to cancel.
5. Press ☎ to return to standby mode.

7. Clock & Alarm

If you have subscribed to your network's caller display service, the base automatically sets the date and time of all handsets when you receive the first call. You can also manually set the time on the individual handsets.

7.1 To set date and time manually

1. Press Menu, scroll ▼ to Clock & Alarm and press Select.
2. Date & Time is highlighted. Press Select.
3. Enter the date using the format DD/MM/YY e.g. 04/08/10 for 4 August 2010.
4. Enter the time (HH:MM) and press Save.
   If the current time format setting is 12 hour, select am or pm.
5. Press ⏻ to return to standby mode.

NOTE

The date and time is retained during a power failure or when the batteries are discharged.

7.2 To set alarm

When the alarm is set, the display shows ⏰ icon.

Each handset can have a different alarm setting.

1. Press Menu, scroll ▼ to Clock & Alarm and press Select.
2. Scroll ▼ to Alarm and press Select.
3. Scroll ▲ or ▼ to Off or On and press Select.
   If Alarm is set to On:
   Scroll ▲ or ▼ to Once, Mon - Fri or On Daily then press Select.
   Enter the time (HH:MM) and press Save.
   If the current time format setting is 12 hour, select am or pm.
4. Press ⏻ to return to standby mode.

NOTES

If the alarm is set to Once, ⏰ *will disappear from the screen after the alarm has sounded once.*

If the alarm is set to On Daily *or* Mon - Fri, ⏰ *will remain on the screen after the alarm has sounded.*

When the alarm goes off, press any key to stop the ring.

7.3 To set time format

1. Press Menu, scroll ▼ to Clock & Alarm and press Select.
2. Scroll ▼ to Time Format and press Select.
3. Scroll ▲ or ▼ to 12 Hour or 24 Hour and press Select.
4. Press ⏻ to return to standby mode.

8. Handset settings

8.1 To set the handset ringtone

You can set different ringtones for external calls and internal calls.

Select from 20 handset ringtones.

You will hear a sample ring as you scroll to each ringtone.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Ringtone is highlighted. Press Select.
4. Scroll ▲ or ▼ to External Call or Internal Call and press Select.
5. Scroll ▲ or ▼ to the ringtone that you want and press Select.
6. Press ☎ to return to standby mode.

8.2 To set the handset ringer volume

The handset has 5 ringer volume settings plus Off.

If the volume is set to Off, icon is displayed along with Ringer Off.

NOTE

Ring tone 1 when set at ring volume 5 will provide an extra loud ringer on the handset.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Ringer Volume and press Select.
4. Volume is highlighted. Press Select.
5. Scroll ▲ or ▼ to adjust the ringer volume level and press Save.
6. Press ☎ to return to standby mode.

TIP

When the phone is ringing, you may press Silence *to silent the ringer for that call.*

8.3 To set the receiver volume

This sets the standard volume level for the handset earpiece or loudspeaker. There are 8 levels to choose from.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Receiver Volume and press Select.
4. Scroll ▲ or ▼ to adjust the receiver volume level and press Save.
5. Press ☎ to return to standby mode.

8.4 To change the handset name

If you are using more than one handset with the CD1 base, you can give each handset a personalised name to easily distinguish between the handsets.

A name can be up to 10 characters long.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Handset Name and press Select.
4. Enter the name and press Save.
5. Press ☎ to return to standby mode.

8.5 To change the display language

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Language and press Select.
4. Scroll ▲ or ▼ to the language you want and press Select.
5. Press ☎ to return to standby mode.

8.6 To set the wallpaper

Select from 5 wallpapers for your handset.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Wallpaper and press Select.
4. Scroll ▲ or ▼ to the wallpaper you want and press View. The wallpaper is displayed.
5. To view the next wallpaper, scroll ▼.
6. Press Use to confirm or Back to cancel and return to the previous menu.
7. Press ☎ to return to standby mode.

8.7 To change menu colour

Select from 3 menu colours for your handset.

The menu colour changes as you scroll to each colour.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Menu Colour and press Select.
4. Scroll ▲ or ▼ to the colour you want and press Select.
5. Press ☎ to return to standby mode.

8.8 To set the screensaver

When the screensaver is set to Clock, an analogue clock is displayed.

The screensaver comes on when the screen backlight switches off in standby mode. To change the backlight timeout setting, see “To set light timeout” in the next section.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Screensaver and press Select.
4. Scroll ▲ or ▼ to Clock or Off then press Select.
5. Press ⏻ to return to standby mode.

8.9 To set light timeout

Set the duration of the backlight after the handset returns to standby screen.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Light Timeout and press Select.
4. Scroll ▲ or ▼ to set the timeout period you want and press Select.
5. Press ⏻ to return to standby mode.

8.10 To change display contrast

Select from 3 levels of contrast.

The brightness of the display changes you scroll to each contrast level.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Display Contrast and press Select.
4. Scroll ▲ or ▼ to Low, Medium or High then press Select.
5. Press ⏻ to return to standby mode.

8.11 To switch auto talk on / off

With Auto Talk switched on, you can answer a call just by lifting the handset off the base or charger. If switched off, you will have to press ✆ to answer a call.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Auto Talk and press Select.
4. Scroll ▲ or ▼ to Off or On then press Select.
5. Press ⏻ to return to standby mode.

NOTE

If Auto Talk mode is switched on and you are subscribed to Call Display service, you will not be able to see the number of the person calling, before you answer the call.

8.12 To switch key beep on / off

When you press a button on the CD1 handset, you will hear a beep. You can switch it on or off.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.

3. Scroll ▼ to Key Beep and press Select.
4. Scroll ▲ or ▼ to Off or On then press Select.
5. Press ☎ to return to standby mode.

8.13 To set PBX access code

If the CD1 is connected to a switchboard, you may need to enter a one-digit access code in the dialling sequence to be able to connect to the outside line.

The access code will be displayed at the beginning of a number on the screen. The code can be up to 4 digits long.

The access code will not be used when you dial the number manually (such as when you are not dialling from the phonebook). This allows you to make calls to other switchboard extensions.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Set Handset is highlighted. Press Select.
3. Scroll ▼ to Access Code and press Select.
4. Scroll ▲ or ▼ to Off, On or Set Code then press Select. If you select Set Code, enter the switchboard access code e.g. 9 then press Save.
5. Press ☎ to return to standby mode.

9. Base settings

9.1 To set the base ringtone

Select from 5 base ringtones.

You will hear a sample ring as you scroll to each ringtone.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Scroll ▼ to Set Base and press Select.
3. Ringtone is highlighted. Press Select.
4. Scroll ▲ or ▼ to the ringtone that you want and press Select.
5. Press ☎ to return to standby mode.

9.2 To set the base ringer volume

The base has 5 ring volume settings plus Off.

NOTE

Ring tone 1 and ring tone 3 when set at ring volume 5 will provide an extra loud ringer on the base.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Scroll ▼ to Set Base and press Select.
3. Scroll ▼ to Ringer volume and press Select.
4. Scroll ▲ or ▼ to display the volume level that you want and press Save.

5. Press to return to standby mode.

9.3 To change the dialling mode

The CD1 is preset to Tone dialling. It is unlikely that you need to change this setting.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Scroll ▼ to Set Base and press Select.
3. Scroll ▼ to Dialling Mode and press Select.
4. Scroll ▲ or ▼ to Pulse or Tone then press Select to confirm.
5. Press to return to standby mode.

9.4 To set ring priority

When you have more than one handset registered to your base, you can set one handset to ring before the other handsets. This allows one handset user to answer all incoming calls first, for example, the receptionist.

Choose All Handsets if you want all handsets to ring at the same time or Select Handset to nominate a handset to ring two times before the other handsets ring.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Scroll ▼ to Set Base and press Select.
3. Scroll ▼ to Ring Priority and press Select.
4. Scroll ▲ or ▼ to All Handsets or Select Handset then press Select.

   If you choose Select Handset, all available handsets are displayed.
   - Scroll ▲ or ▼ to the handset you want then press Select.
   - Scroll ▲ or ▼ to the number of rings that you want to set: 2, 4 or 6 and press Select.
5. Press to return to standby mode.

9.5 To change the recall mode

Recall is useful to access certain network services and PABX/switchboard services.

The default recall mode preset in the CD1 is suitable for your country network and therefore you should not need to change it.

NOTE

The use of the CD1 cannot be guaranteed on all PABX.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Scroll ▼ to Set Base and press Select.
3. Scroll ▼ to Recall Mode and press Select.
4. Scroll ▲ or ▼ to Recall 1 or Recall 2 then press Select to confirm.

5. Press ☎ to return to standby mode.

9.6 To switch first ring on / off

If you have subscribed to your network's Caller Display service, the CD1 will not ring until the caller information has been received and displayed.

However, if you want your handset to ring without waiting for the caller information to be displayed, set First Ring to On. Please note that this will mean that the first ring you hear will be the default ringtone. It will change to the ringtone that you have set once the caller information is displayed.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Scroll ▼ to Set Base and press Select.
3. Scroll ▼ to First Ring and press Select.
4. Scroll ▲ or ▼ to On or Off then press Select to confirm.
5. Press ☎ to return to standby mode.

9.7 To change the System PIN

The System PIN is required when changing certain settings and for registration / de-registration. The default setting is 0000. You can change this to your own preferred number (up to 4 digits).

When you enter a PIN, the digits are shown as ****.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Scroll ▼ to Set Base and press Select.
3. Scroll ▼ to System PIN and press Select.
4. Enter the old PIN (Default setting = 0000) and press OK.
5. Enter the new PIN and press OK.
6. Re-enter the new PIN and press OK.
7. Press ☎ to return to standby mode.

NOTE

It is advisable to make a note of your new PIN code and keep it somewhere safe.

9.8 To reset the CD1

You can restore the CD1 to its default (original) settings.

Resetting the CD1 will not affect the phonebook or calls list, and all handsets registered to the base will be retained. Only the handset and base settings will be reset.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Scroll ▼ to Set Base and press Select.
3. Scroll ▼ to Master Reset and press Select.
4. Select Yes to confirm or No to cancel.
5. Enter the System PIN (Default setting = 0000) then press OK. The display will show Reset complete and the unit will restart automatically.

9.9 To switch ECO mode on / off

You can switch on ECO mode to reduce the level of power emissions and save battery power.

1. Press Menu, scroll ▼ to Settings and press Select.
2. Scroll ▼ to Set Base and press Select.
3. Scroll ▼ to ECO Mode and press Select.
4. Scroll ▲ or ▼ to Off or On then press Select to confirm.
5. Press ⏻ to return to standby mode.

NOTE

When the ECO mode is set to ON, the icon is replaced with icon. The base transmission power will be reduced.

10. Registration

Up to 5 handsets can be registered to one base station. Additional handsets must be registered to the base before you can use them.

- The instructions described below apply specifically to the CD1 handset. If you wish to register another manufacturer's handset, the instructions may vary. In this case, please refer to the instruction manual of the additional handset.
- The System PIN is required to register or unregister handsets. The default PIN is 0000.

10.1 To register a handset

On the base:

1. Press and hold 📡 for 3 seconds until the base LED starts flashing. The base will remain in registration mode for 90 seconds.

On the handset:

1. If the handset is new, the display shows Please register. Press Menu, scroll ▼ to Registration and press Select.
   Or
   If the handset has already been registered to another base, the standby display is shown. Press Menu, scroll ▼ to Registration and press Select.

2. Register Handset is highlighted. Press Select.
3. Bases are displayed. If necessary, scroll ▲ or ▼ to a new base you wish to register the CD1 handset to and press Select.
4. Enter the System PIN and press OK. (default setting = 0000)
5. The display shows Searching Base X (where X is the chosen base number). When registration is complete, the display shows Handset registered.
   The handset is automatically assigned the next available handset number.

NOTE

If registration is not successful the first time, please repeat the process again in case the base registration period ran out of time.

If there are already 5 handsets registered to the base, registration will fail. You must de-register a handset before you can register a new one.

10.2 To select a base

You can register the CD1 handset with up to 4 bases. Once registered, you can switch between bases, for example, bases at home and at work.

1. Press Menu, scroll ▼ to Registration and press Select.
2. Scroll ▼ to Select Base and press Select.
3. All the base numbers are displayed.
   (In use) is shown beside the base number where the handset was previously registered to. Scroll ▲ or ▼ to the base you want and press Select.
4. The display shows Searching Base X.... When registration is complete, the handset returns to standby mode.

10.3 To de-register a handset

Use one handset to de-register another. You cannot de-register the handset that you are using.

1. Press Menu, scroll ▼ to Registration and press Select.
2. Scroll ▼ to De-register and press Select.
3. Enter the System PIN and press OK. (default setting = 0000)
4. Scroll ▲ or ▼ to the handset you want to de-register and press Select.
5. Press Yes to confirm or No to cancel.
6. Press ⏻ to return to standby mode.

11. Room Monitor

You can use your CD1 handset to monitor the sounds in another room. If the sounds reach a certain level the handset will automatically dial out to a preset external number or to another handset. When the Room Monitor is set to On, the handset will display Room Monitor On and only the microphone will be active to monitor the sound levels in the room. Both the speaker and receiver will be set to Off and the handset will not ring if there's any incoming call.

11.1 To switch Room Monitor On

1. Press Menu, scroll ▼ to Extra then press Select. Room Monitor is highlighted. Press Select. Mode will be highlighted.
2. Press Select, scroll ▼ to On then press Select. Set to ON is displayed for 2 seconds. The handset returns to idle screen and display as Room Monitor On.
   To switch off Room Monitor press Off.

11.2 To change the monitor level

The monitor level can be set to High or Low, the default setting is "Low".

To increase the sensitivity of the Room Monitor:

1. Press Menu, scroll ▼ to Level, press Select and scroll ▲ or ▼ to select Low or High setting.

11.3 To set the dial out number

1. Press Menu, scroll ▼ to Call to and press Select.
2. Use the ▲ or ▼ key to select External or Internal.

External

1. Press Select and Enter Number: prompt will be displayed.
2. Enter the number and press Save. Saved will be displayed.
   When Room Monitor is switched on and the sound level reaches a certain level the number will be automatically dialled.

Internal

1. Press Select and the registered handset will be listed, for example "Handset 2".
2. Scroll ▲ or ▼ to select the handset the Room Monitor will call if the noise levels reach a certain level.
3. Press Select and Set to handset 2 is displayed.

NOTE

If only one handset is registered the display prompts "Not available" and returns to the previous screen. You must

register additional handsets before the handsets will be displayed and make Internal calls.

NOTE

If the Room Monitor is triggered to call a handset or number and the called handset is on a call, an alert tone of 3 beeps will be heard. If the Room Monitor is triggered continuously the alert beap will be emiitted every 5 seconds.

WARNING

This product is not intended for use as a baby safety device and is not a substitute for adult supervision.

12. The Answering machine

The CD1 answering machine records unanswered calls when it is activated. It can store up to 59 messages within the maximum recording time of 30 minutes. Each message can be up to 3 minutes long. Your personalised outgoing messages can be up to 3 minutes long.

You can operate your answering machine from:

- the base.
- the handset.
- remotely, from another phone (see page 45).

NOTE

You will need to set the date and time (if you have not already done so) so that you will know when each message was received, see page 30.

12.1 Base control keys

Press to switch the answering machine on/off.
Press and hold to enter the outgoing message (OGM) selection mode.

Press to play all stored messages.
Press to pause or resume playback.

Press to stop message playback.

Skip to the next message during message playback.
Select **Answer Only OGM** during OGM selection mode.

	Replay current message. Press twice to skip back to previous message. Select **Answer & Record OGM** during OGM selection mode.
	Delete current message during message playback. Press to delete personal OGM during OGM playback. The pre-recorded OGM is selected and played.
	Increase speaker volume during message playback.
	Decrease speaker volume.

For more information on outgoing messages (OGM), see page 42.

12.2 To switch the answering machine on / off

When switched on, the handset display shows in standby mode.

1. Press **Menu**, scroll ▼ to **Answer Machine** and press **Select**.
2. Scroll ▼ to **Answer On/Off** and press **Select**.
3. Scroll ▲ or ▼ to **Off** or **On** then press **Select**.
4. Press to return to standby mode.

TIP

Alternatively, press on the base to switch on the answering machine.

12.3 To change answer delay

Answer delay sets the number of times the CD1 will ring before the answering machine picks up your call and starts playing the outgoing message.

You can change this setting to between 2–9 rings or **Time Saver**. The default setting is 5 rings.

1. Press **Menu**, scroll ▼ to **Answer Machine** and press **Select**.
2. Scroll ▼ to **Answer Settings** and press **Select**.
3. Scroll ▲ or ▼ to **Answer Delay** and press **Select**.
4. Scroll ▲ or ▼ to the setting you want and press **Select**.
5. Press to return to standby mode.

NOTE

If **Time Saver** *is set, the answering machine will answer after 2 rings during remote access if you have new messages. If you do not have any new messages, it will answer after 5 rings. This means you can hang up after 3 rings knowing you have no new messages, saving you time and the cost of the call.*

12.4 To switch message alert tone on / off

When you have new messages, with the audible message alert switched on, you will hear an audible alert once at the handset and the answering machine base will beep every 10 seconds. The default setting is Off.

1. Press Menu, scroll ▼ to Answer Machine and press Select.
2. Scroll ▼ to Answer Settings and press Select.
3. Scroll ▲ or ▼ to Message Alert and press Select.
4. Scroll ▲ or ▼ to Off or On then press Select.
5. Press ⏻ to return to standby mode.

12.5 New messages alert

When you have new messages, the display shows You have X new messages.

If you press Back, the screen returns to standby mode and the icon is displayed.

1. Press Play and scroll ▲ or ▼ to the message you want to play. Press Play to hear the highlighted message.

12.6 Outgoing messages

The outgoing message is the message a caller first hears when the answering machine picks up their call. The CD1 comes with 2 pre-recorded outgoing messages, or you can record your own.

12.7 To record a personalised outgoing message

You can record personalised outgoing messages up to 3 minutes long for your callers.

The Answer & Record mode allows your caller to leave a message after the announcement, while the Answer Only mode only allows your caller to hear the announcement. You will be prompted to select the mode before the recording.

1. Press Menu, scroll ▼ to Answer Machine and press Select.
2. Scroll ▼ to Outgoing Message and press Select.
3. Record is highlighted, press Select.
4. Scroll ▲ or ▼ to Answer & Record or Answer Only then press Select.
5. The display shows Please speak after the tone.
6. After the tone, speak your message clearly into the handset then press Save to end recording.
7. Your outgoing message is played back. If you want to delete it, press Delete during playback. If you press Save or wait for the message to play back, it will be saved.
8. Press ⏻ to return to standby mode.

12.8 To play or delete your personalised outgoing message

Deleting a personalised outgoing message automatically reinstates the pre-recorded outgoing message, if you have set the personalised outgoing message as your announcement before.

You cannot delete a pre-recorded message.

1. Press Menu, scroll ▼ to Answer Machine and press Select.
2. Scroll ▼ to Outgoing Message and press Select.
3. Scroll ▼ to Play and press Select.
4. Scroll ▲ or ▼ to Answer & Record or Answer Only then press Select.
5. Scroll ▼ to Personal OGM and press Select.
6. The message is played. Press OK to stop playback or press Delete to delete the message.
7. Press ☎ to return to standby mode.

12.9 To set the answer mode and announcement

The Answer & Record mode allows your caller to leave a message after the announcement, while the Answer Only mode only allows your caller to hear the announcement. Select a pre-recorded or personalised outgoing message as your announcement to the callers.

1. Press Menu, scroll ▼ to Answer Machine and press Select.
2. Scroll ▼ to Answer Settings and press Select.
3. Scroll ▼ to Answer Mode and press Select.
4. Scroll ▲ or ▼ to Answer & Record or Answer Only then press Select.
5. If there is a personalised outgoing message saved, scroll ▲ or ▼ to Default OGM or Personal OGM then press Select to confirm.
   Or
   If there is no personalised outgoing message saved, the pre-recorded outgoing message will be selected automatically.
6. Press ☎ to return to standby mode.

12.10 To record a memo

You can record a memo which is stored on your answering machine and played back like a normal message.

1. Press Menu, scroll ▼ to Answer Machine and press Select.
2. Scroll ▼ to Record Memo and press Select.
3. The display shows Please speak after the tone.
4. After your hear the tone, speak your memo then press Save to end recording.

5. Your memo is played back. If you want to delete it, press Delete during playback. If you press Save or wait for the message to play back, it will be saved.
6. Press ⏻ to return to standby mode.

NOTE
When a memo is played back, Memo is displayed on the handset.

12.11 Call screening

When the answering machine is on and takes a call, you can use the loudspeaker to listen to the caller leaving a message. You can then identify the caller and decide whether to take the call in person.

1. When the handset rings, wait for the answering machine to take the call. When the caller begins leaving a message, the display shows Recording. Press Screen to hear the caller.
2. To interrupt and speak to the caller directly, press ✆.
3. Press ⏻ to return to standby mode.

NOTE
While screening, you can adjust the volume by pressing ▲ or ▼.

12.12 Message playback

Each message is played back with day and time of the call announced. The caller's number is displayed (if stored in the phonebook).

Press ✆ during playback to switch between the earpiece and handset loudspeaker.

1. Press Menu, scroll ▼ to Answer Machine and press Select.
2. Play is highlighted. Press Select to play by message or scroll ▼ to Play All then press Select to play all messages.
3. During playback, press Options. The options Pause, Repeat Message, Play Next, Play Previous and Delete are displayed.
4. Scroll ▲ or ▼ to highlight the option and press Select to confirm.
5. At the end of playback, press Back to return to the previous menu level.

TIPS
Alternatively, you may use press the following keys on your handset during playback:

1 To pause
2 ABC To resume
3 DEF To repeat message
4 GHI To play previous message

5 JKL To delete current message

6 MNO To play next message

12.13 Delete all old messages

Answering machine messages that are not deleted are automatically saved.

New messages or existing messages that have not been played back cannot be deleted.

1. Press **Menu**, scroll ▼ to **Answer Machine** and press **Select**.
2. Scroll ▼ to **Delete Messages** and press **Select**.
3. Display shows **Delete All Old Messages**? Press **Yes** to confirm or **No** to cancel.
4. Press ⏻ to return to standby mode.

NOTES

If the memory is within 10 seconds of becoming full while a caller is leaving a message, they will hear, "Please complete your message within 10 seconds". If they are still talking when the memory becomes full the caller hears, "Thank you for calling", and the machine will hang up.

When the memory is full, the outgoing message will automatically be set to **Answer Only**. *You must delete old messages before the CD1 can record new messages.*

12.14 Remote access

Remote access allows you to operate your answering machine and listen to your messages by calling the CD1 from another phone.

The default setting is On.

1. Call your CD1. When you hear the announcement, press *.
2. Enter your 4 digit remote access PIN (default setting = 0000). You will hear a confirmation beep.

NOTE

You should change this code for additional security, see "To change the remote access PIN".

3. Use the following keys to operate your answering machine:

DTMF code	Operations	
	with Voice Prompts	with Outgoing Messages
*	To enter remote access mode	To enter remote access mode
1	To hear main menu	No action
2	To play all messages	To play all messages
3	To play new messages	To play new messages
4	To skip back during messages	To skip back during messages

5	To delete during messages	To delete during messages
6	To skip forward during messages	To skip forward during messages
7	To set answer mode	No action
8	To record a new OGM	No action
9	To switch answer machine off	To switch answer machine off
0	To switch answer machine on	To switch answer machine on

NOTES

If you have any new messages they will be played after you have entered your remote access PIN code.

If you enter an incorrect PIN code you will hear 'Incorrect security code or two beeps (error beeps). Please enter your security code' . You can try entering the code again. If it is still incorrect you will hear the voice prompt or two beeps (error beeps) and the CD1 will hang up.

12.15 To switch remote access On / Off

1. Press Menu, scroll ▼ to Answer Machine and press Select.
2. Scroll ▼ to Answer Settings and press Select.
3. Scroll ▲ or ▼ to Remote Access and press Select.
4. Scroll ▲ or ▼ to Off or On then press Select.
5. Press ⏻ to return to standby mode.

12.16 To change the remote access PIN

The default remote access PIN is 0000.

1. Press Menu, scroll ▼ to Answer Machine and press Select.
2. Scroll ▼ to Answer Settings and press Select.
3. Scroll ▲ or ▼ to Remote Access and press Select.
4. Scroll ▲ or ▼ to Set Remote PIN and press Select.
5. Enter the old 4-digit PIN and press Save. (default setting = 0000)
6. Enter the new 4-digit PIN and press Save.
7. Enter the new PIN again and press Save.
8. Press ⏻ to return to standby mode.

NOTES

This PIN is different from the System PIN used when resetting the unit or when registering/de-registering handset.

It is advisable to make a note of your new PIN code and keep it somewhere safe.

13. Help

The handset is not charging when the handset is placed on the base

- The handset has been placed incorrectly. Make sure that the charging contacts on the handset are aligned with the charging contacts on the base. During charging, the icon in the handset display will scroll.
- Dirty contacts - Unplug from the mains power and clean the charging contacts with a cloth. (Do not wet it and do not immerse in water)

No dial tone

- No power - check the connections. Unplug the power cable and plug it back into the mains outlet.
- Batteries are empty - charge the batteries for at least 24 hours. Replace the rechargeable batteries.
- You are too far from the base - move closer to the base
- Wrong line cord - only use the telephone line cord provided
- Micro filter (when required, not included) is not connected to the line cord - connect the micro filter to the line cord.

Poor audio quality

- The base is too close to electrical appliances, reinforced concrete walls or metal door frames - move the base at least one metre away from any electrical appliances.

The signal icon is blinking

- Handset is not registered to the base - register the handset to the base.
- You are too far from the base - move closer to the base.
- Switch ECO mode off.

No ring tone

- The ringer volume may be switched off.
- Increase the volume.

No Caller Display

- Check your subscription with your network operator.
- The caller may have withheld his/her number.
- The record cannot be found in your phonebook. Check that you have the correct name/number stored in your phonebook, with the complete area code.

A phonebook entry cannot be stored

- The phonebook is full. Delete unused entries.

No display

- Try recharging or replacing the batteries.
- Try disconnecting and connecting the base power supply.

Unable to register another handset

- You can register up to 5 handsets to the CD1 base and you can register the CD1 handset with up to 4 bases. Check that you have not exceeded the limits.
- Check that you have entered the correct PIN number (default setting = 0000).
- Check that you are at least one metre away from other electrical equipment to avoid interference when registering.

Handset display shows Please Register

- Please refer to page 37 of the user guide to re-register your handset to the base.

Noise interference on your radio or television

- Your base or charger may be too close. Move it as far away as possible.

Answering machine does not record messages

- Switch the answering machine on.
- The memory may be full. If so, you will need to delete some messages.
- Answer mode may have been set to Answer Only. Change the mode to Answer & Record.

Cannot access messages remotely

- Remote access may be switched off.
- Check that you are using the correct PIN code.

Cannot record outgoing message

- The memory may be full. If so, you will need to delete some messages.

Answering machine stops recording

- The memory may be full. If so, you will need to delete some messages.
- The maximum message length is 3 minutes.

14. General information

IMPORTANT

This equipment is not designed to make emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

This product is intended for connection to analogue public switched telephone networks and private switchboards in the United Kingdom.

Important safety instructions

Follow these safety precautions when using your phone to reduce the risk of fire, electric shock, and injury to persons or property:

1. Keep all slits and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
2. Do not use while wet or while standing in water.
3. Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
4. Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.
5. Never insert objects of any kind into the product vents as that may result in fire or electric shock.
6. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
7. Do not disassemble this product. If service or repair work is required, contact the customer service helpline found in this user's Guide.
8. Do not overload wall outlets and extension cords.
9. Avoid using during an electrical storm. Use a surge protector to protect the equipment.
10. Do not use this phone to report a gas leak, especially if you are in the vicinity of the gas line.

CAUTION

To reduce the risk of fire, use only the supplied power adaptor.

Unplug this cordless phone immediately from an outlet if:

- The power cord or plug is damaged or frayed.
- Liquid has been spilled on the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by the unplugged cords.
- The product has been dropped or the cabinet has been damaged.
- The product exhibits a distinct change in performance.

Installation Guidelines

1. Read and understand all instructions and save them for future reference.
2. Follow all warnings and instructions marked on the product.
3. Do not install this product near a bath tub, sink, or shower.
4. Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company.
5. Do not place this product on an unstable cart, stand, or table. This product may fall, causing serious damage to the product.
6. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.
7. Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.
8. Use only the power supply that came with this unit. Using other power supplies may damage the unit.
9. Because this phone operates on electricity, you should have at least one phone in your home that could operate without electricity in the case the power in your home goes out.
10. To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.

Battery Safety Instructions

- Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in injury.

CAUTION

There is a risk of explosion if you replace the battery with an incorrect battery type. Use only the battery pack that came with your phone or an authorized replacement recommended by the manufacturer.

- Keep battery packs out of the reach of children.
- Remove battery packs if storing over 30 days.
- Do not dispose of battery packs in fire, which could result in explosion.
- The rechargeable battery packs that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.

SAVE THESE INSTRUCTIONS

Cleaning

- Clean the handset and base (or charger) with a damp (not wet) cloth, or an anti-static wipe.

- Never use household polish as this will damage the product. Never use a dry cloth as this may cause static shock.

Environmental

- Do not expose to direct sunlight.
- The handset may become warm when the batteries are being charged or during prolonged periods of use. This is normal. However, we recommend that to avoid damage, do not place the product on antique/veneered wood.
- Do not place your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces.
- Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.
- Do not expose your product to fire, explosives or other hazardous conditions.
- There is a slight chance that your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord during an electrical storm.

Product disposal instructions

Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product according to your local authority's recycling processes. For more information, please contact your local authority or the retailer where the product was purchased.

Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.

Consumer Products and Accessories Warranty

Thank you for purchasing this Motorola branded product manufactured under license by Suncorp Technologies Limited, 3001-3005 China Resources Building, 26 Harbour Road, Wan Chai, Hong Kong. ("Suncorp")

What Does this Warranty Cover?

Subject to the exclusions contained below, SUNCORP TECHNOLOGIES LTD. warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Limited Warranty is your exclusive warranty and is not transferable.

Who is covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What will SUNCORP TECHNOLOGIES LTD do?

SUNCORP TECHNOLOGIES LTD or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that does not conform to this limited warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA OR SUNCORP TECHNOLOGIES LTD BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	**One (1) year** from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories (battery, power supply(s) and line cords)	**Ninety (90) days** from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	**The balance of the original warranty or for ninety (90) days** from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola or SUNCORP TECHNOLOGIES LTD., are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, SUNCORP TECHNOLOGIES LTD. or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call: **0800 0820750**

You will receive instructions on how to ship the Products or Accessories at your expense, to SUNCORP TECHNOLOGIES LTD. It is the responsibility of the purchaser to contact the nearest authorised service center/ distributor and bring the product at the purchaser's risk to that authorised service center.

Authorized Repair Center

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

Technical Information

How many telephones can I have?

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. The CD1 has a REN of 1. A total REN of 4 is allowed. If the total REN of 4 is exceeded, the telephones may not ring. With different telephone types there is no guarantee of ringing, even when the REN is less than 4.

Any additional handsets and chargers that you register have a REN of 0.

R&TTE

This product is intended for use within the United Kingdom for connection to the public telephone network and compatible switchboards.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

Connecting to a switchboard

This product is intended for use within the United Kingdom for connection to the public telephone network and compatible switchboards, which support tone dialling and timed break recall. If in doubt please consult your service provider.

Inserting a pause

With some switchboards, after dialling the access code you may have to wait for a moment while the switchboard picks up an outside line. Therefore you will need to enter a pause in the dialing sequence.

- Press and hold # to insert a pause (P) before entering the telephone number.

You may also need to enter a pause when storing international numbers or charge card numbers.

Recall

You may need to use the recall function if you are connected to a switchboard/PBX (Private Branch Exchange), contact your PBX provider for further information.

Suncorp

CE

Declaration of Conformity (DoC)

Suncorp declares that the following products:

Brandname: Motorola
Type: CD111, CD112, CD113 and CD114

Descriptions: DECT phone with telephone answering machine (CD11x) and their multi-handset versions.

to which this declaration related is in conformity with the essential requirements of the following directives of the Council of the European Communities:

- R&TTE Directive (1999/5/EC)
- Ecodesign Directive (2005/32/EC)

The products are compliant with the following standards:

Safety:	EN60950-1:2006
EMC:	EN301489-1 v1.8.1 and EN301489-6 v1.3.1
RF Spectrum:	EN301406 v1.5.1
Ecodesign:	EC No 278/2009, 6 April 2009

For and on behalf of Suncorp Technologies Limited,

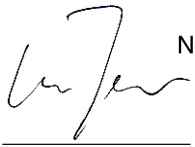

Norman Tse

Digitally signed by Norman Tse
DN: cn=Norman Tse, c=<n
Date: 2010.09.10 00:22:40 +08'00'

Signature: _____

Printed name & Position: Norman Tse – Senior Engineering Manager

Date: 8th September 2010

Place: 3001-3005 China Resources Building, 26 Harbour Road, Wan Chai, Hong Kong

Manufactured, distributed or sold by Suncorp Technologies Ltd. official licensee for this product. MOTOROLA and the Stylized M Logo, and other Motorola trademarks and trade dress are owned by Motorola, Inc. and are used under license from Motorola, Inc. MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.
© Motorola, Inc. 2010. All rights reserved.

Version 8 (UK)